



- Don't disassemble or repair this metronome by yourself.
- Don't use or store it near any heat sources, damp and dusty areas. Avoid violent vibration or shock.
- Don't drop this metronome, otherwise it may malfunction.
- Don't use alcohol or other cleaning fluids to clean this metronome.

The diagram illustrates the Metronome IDM-007 from two perspectives: front and side. The front view (left) shows a rectangular device with a large display screen at the top, a central circular dial, and several control buttons. The side view (right) shows the profile of the device, highlighting the earphone jack, a small button, a USB port, and a large speaker grille. Numbered callouts 1 through 8 identify specific components:

- 1: Top edge of the device.
- 2: Display screen.
- 3: Control buttons and central dial area.
- 4: USB port.
- 5: Earphone jack.
- 6: Small button.
- 7: Side edge of the device.
- 8: Large speaker grille.

1. TAP TEMPO
2. LCD screen: indicating metronome's operations
3. Buttons: adjusting each function (For details, pls refer to IV.Button's function and operation)
4. VOLUME knob: adjusting the volume
5. Headphone Jack: for connecting to the headphones
6. Charging port: for charging the metronome
7. Knob: Adjusting the tempo, rhythm and pre-beat
8. Bellmouth orifice: the sound is emitted from it

When the unit is turned off, press both " " and " " buttons simultaneously until the display screen is lit, all the stored parameters will be cleared and reset to factory settings: beat=4/4, tempo=120, rhythm=, pre-beat=0, sound=voice.

Button	Operation	The LCD screen is not flashing	The Pre-beat is flashing	The Rhythm is flashing
B.T	Tap	Sever the current Bluetooth connection	Exit Pre-beat selection	Exit Rhythm selection
	Long press it for 2 seconds	Turn on/off the Bluetooth	Exit Pre-beat selection	Exit Rhythm selection
	Tap	Adjust the Beat	Exit Pre-beat selection	Exit Rhythm selection
	Long press it for 2 seconds	Select the Pre-beat	Select the Pre-beat	Select the Pre-beat
	Tap	Adjust the Sound	Exit Pre-beat selection	Exit Rhythm selection
	Long press it for 2 seconds	Rhythm selection	Rhythm selection	Rhythm selection
	Tap	Play/pause the metronome	Exit Pre-beat selection	Exit Pre-beat selection
	Long press it for 2 seconds	Turn on/off the unit	Turn on/off the unit	Turn on/off the unit
Adjust the knobs	Turn it clockwise	Speed up the tempo	Increase the Pre-beat	Increase the Rhythm
	Turn it counterclockwise	Slow down the tempo	Reduce the Pre-beat	Reduce the Rhythm

1. When the unit is turned off, long press “▶” button until the display screen is lit.
2. Adjust each parameter according to “IV.Button’s function and operation”
3. Tap “▶” button to turn on the metronome.
4. You can get a suitable volume by adjusting the VOLUME knob.

Tempo: 30-252 bpm
Beat: 0/4, 1/4, 2/4, 3/4, 4/4, 3/8, 6/8
Pre-beat: 0-6
Metronome's tone: Voice, mechanical metronome, digital metronome, cowbell, wooden fish(muyu).
Rhythm:
Speakers: 1.5W*2
Bluetooth version: 5.2
Battery: Rechargeable lithium battery(3.7V 1100mAh)
Weight: 260g
Dimensions: 80(L)×70(W)×163(H) mm

iDM-007 Metronomex1 Owner's manualx1 Charging cablex1

Guangzhou DK Technology Ltd.

Manufacturer: Guangzhou DK Technology Ltd.

Address: Unit 306, Building B5, No. 8, Yiheng Road, Shijing Industrial Zone,
Shisha Road, Shimen Street, Baiyun District, Guangzhou

Official Website: www.dk-music.cn