



IT-100G
DK.TECHNOLOGY


OWNER'S MANUAL

Thank you for purchasing DK tuner, metronome, tone generator 3 in 1.

Precautions

- Avoid use in direct sunlight, extreme temperature or humidity, excessive dust, dirt or vibration or close to magnetic fields.
- Be sure to power off the unit when not in use and remove the battery for extended periods of inactivity.
- Radios and televisions placed nearby may experience reception interference.
- To avoid damage, do not apply excessive force to the switches or controls.
- For cleaning, wipe with a clean, dry cloth. Do not use flammable liquid cleaners such as benzene or thinner.
- To avoid damage fire, or electrical shock, do not place liquids near this equipment.

Controls and functions

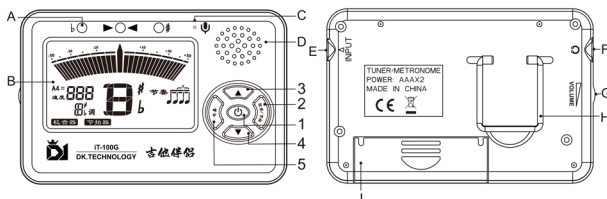

Long press		Short press	
NO.	Long press button	Metronome mode	Tuner mode
1	ON/OFF	Start/pause metronome	Select
2	Tuner/metronome switch	Select beat	Select mode
3	/	Tempo up	Select pitch
4	/	Tempo down	Select
5	/	Select rhythm	Start/Pause tone generator

A. LED B. Screen C. MIC. D. Speaker E. Input
F. Headphone G. Volume gear H. Stand I. Battery cover

Installing battery

1. Open the battery cover according to the mark on battery cover.
2. Installing 2pcs AA batteries. Please pay attention for the polarity. If can not turn on the device please take off the battery and installing them again.

Using the tuner

1. Connect the cable to your instrument
2. Chose tuner mode: select chromatic (C), guitar(G), bass(B), violin(V), ukulele(U), short press tuner/metronome button to select tuning mode.
3. Chose wind instrument tuning mode, suitable for 12 different keys, preset key is C, short press ON/OFF button to switch.
4. Play a single note of your instrument, the note name will shown on screen.
5. While playing a single note of your instrument, the meter in the screen moves:
meter stays in the middle, green guid light lits: in tune
meter stays in the left, red guid light lits: falt note
meter stays in the right, red guid light lits: sharp note

Using the metronome

1. Long press "tuner/metronome" button to switch from tuner to metronome mode
2. Press "tuner/metronome" button to select beat: 0,1,2,3,4,5,6,7,8,9
3. Press button 3 or button 4 to set the tampo. Tampo range: 30bpm-260bpm. If press and hold button 3 or 4, setting will keep changing.
4. Press "rhythm" button to select 8 different rhythm ♩ ♩ ♩ ♩ ♩ ♩ ♩ ♩
5. Press ON/OFF button to start metronome.
6. Short press ON/OFF button to pause the metronome
7. The device will automatically power off if no any signal input for 3 minuts or if not start metronome will power off automatically also.

Specification

Tuner

Tuning mode: chromatic, guitar, bass, violin, ukulele
Key selection: C -C[#] - D -E[#] - E - F -F[#] - G -G[#] -A-B[#] -B
Tuning tolerance: +0.5 cents
Tuning method: Mic.and vibration
Pitch range: A0(27.5Hz)- C8(4186.00Hz)

Metronome

Tempo range: 30-260BPM
Beat: 0,1,2,3,4,5,6,7,8,9
Rhythm: ♩ ♩ ♩ ♩ ♩ ♩ ♩ ♩

Connection: 3.5mm mono input, 3.5mm headphone stereo output
Power: 2pcs AAA battery
Dimension: 105X68X17mm
Weight: 80g
Accessories: User manual, 2pcs AAA battery, 1pcs pick up cable

