iDM-005

Metronome

OWNER'S MANUAL

DK.TECHNOLOGY

Thanks for purchasing DK Metronome . Please read the user guide before using the device.

CAUTIONS

Location
Using the device in the following locations can result in a malfunction.
• In direct sunlight
• Locations of extreme temperature or humidity
• Excessively dusty or dirty locations
• Locations of excessive vibration
• Any location near magnetic fields

Power supply
Please turn off the device when not use it or take off the battery if long time not in use.

Handling
To avoid breakage, do not apply excessive force to the switches or display.

Care
If the exterior becomes dirty, wipe it with a clean, dry cloth. Do not use liquid cleaners such as benzene or thinner, or cleaning compounds of flammable polishes.

Keeping foreign matter out of your equipment
Never set any container with liquid in it near this equipment. If liquid gets into the equipment, it could cause a breakdown, fire, or electrical shock.
Be careful not to let metal objects get into the equipment.

Keep this User Guide
Please keep this user guide for later use.

CONTROLS AND FUNCTIONS

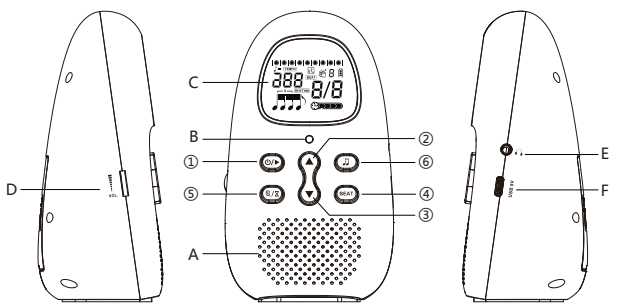

1.On/Off; Start/ Stop metronome
2.Speed up
3.Speed down
4.Metronome/ Prepare
5.Voice beat/ Timer
6.Rhythm/Metronome sounds

A.Speaker
B.LED indicator
C.Screen
D.Volume wheel
E.Headphone jack
F.USB Type-C jack

SPECIFICATION

Tempo range: 40bpm-208bpm
Beat: -/4, 1/4, 2/4, 3/4, 4/4, 3/8, 6/8
Prepare function
Voice beat: English
Rhythm: ♩,♪♪,♫,♩𝅘𝅥𝅯𝅘𝅥𝅯,♪𝅘𝅥𝅯𝅘𝅥𝅯,♫,♪♪
Timer: 15min, 30min, 45min, 60min
Power: AAA battery 3pcs
Dimension: 137×79×39mm
Weight: 156g
Accessories: manual, AAA battery 3pcs
(Test condition: Metronome mode, Volume Max, Tempo 120,
Beat 4 , rhythm ♩)
Power saving mode: device will turn off automaticlly if not in use while 3 minutes.

USE THE METRONOME

1. Press and hold to turn On/Off.
2. Press BEAT button to adjust: -/4, 1/4, 2/4, 3/4, 4/4, 3/8, 6/8
3. Press "▲" "▼" to adjust the tempo.
4. Press "♫" to adjust rhythm.
5. Press and hold "♫" to adjust metronome sound.
6. Short press on/off button to start or stop metronome, LED light flashing according to speed.
7. Press "/" to start or stop voice beat function.
8. Press and hold "/" to start or stop timer.

9. Press and hold BEAT button to start or stop prepare function, prepare time is one bar.

*All setting will be save when turn off.

HEADPHONE CONNECTION

If you want to use headphone, please connect your headphone with the headphone output at the side. Volume can be adjusted by rolling the control wheel.
Note: Speaker will not make sound when headphone is connected.

POWER SUPPLY

AAA battery or Type-C connection.

GuangZhou DK Technology Ltd.
Manufacturer: Zhuhai DK Technology Co., Ltd
Address: 1601A, Block A, Dazhou Science and Technology Park, No.1 Gangle Road, High tech Zone, Zhuhai City
Phone: 0756-3666689
Official Website: www.dk-music.cn

RoHS CE

MADE IN CHINA