

iT-540 USER MANUAL

Product illustration

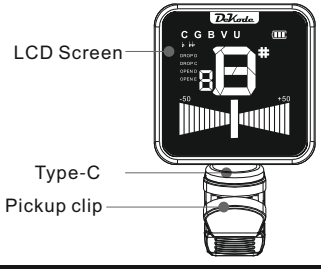

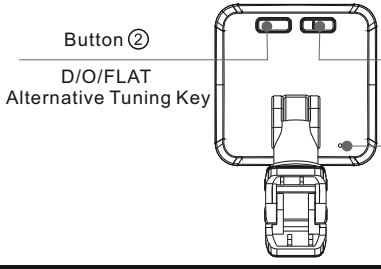

Button function and operations

Operation	Long press	Short Press
Button ①	Power on / Power off	Chromatic/Guitar/Bass/Violin/Ukulele
Button ②	Exit special tuning and return to normal tuning mode.	After the tuner is powered on, press this key at any time to enter the guitar special tuning function, which cycles in the order: Drop D, Drop C, Open D, Open E, half step down(♭), whole step down(♭ ♭).

1.Please follow the above procedure to set the tuner to the desired tuning mode.
2.Take the 3rd string in guitar mode as an example: Clip the tuner onto a part of the instrument that vibrates clearly (e.g., the head stock). Pluck the string and adjust until the display indicates it is in tune.



Low



In tune



High

3.Memory Function: Each time the system shuts down, The tuner automatically saves the last used settings before powering off. When starting up again, it will automatically enter the pre-shutdown screen.
4.Auto Power-off Function: The display will dim after 2 minutes of inactivity to save power. If no signal is detected for 3 minutes, the device will power off automatically.
5.Reset Function: Whether the device is powered on or off, insert the SIM eject pin into the RESET hole and press briefly once, then the whole device will reset and restart.

Technical specifications:

~Detection mode: Vibration
~Tuning modes:
Chromatic/ Guitar/ Bass/ Violin/ Ukulele
~ Special Tuning Modes:
Drop D, Drop C, Open D, Open E, ♭, ♭ ♭
~A4 frequency:440Hz
~Charging Port: Type-C
~Battery capacity: Built-in rechargeable lithium battery (200mAh)

Alternative Tuning, in order from the 6th string to the 1st string

Drop D	D, A, D, G, B, E
Drop C	C, G, C, F, A, D
Open D	D, A, D, #F, A, D
Open E	E, B, E, #G, B, E
♭	Half-Step Down
♭ ♭	Whole-Step Down

Notice

1.The screen displays battery power. When the battery power is too low, please charge the product in time.
2.To maintain battery health, please charge the product at least once every six months during long-term storage.
3.Avoid using this product in harsh environments such as high temperature, humidity, strong direct sunlight, chemical corrosion, or strong electromagnetic fields.
4.Please maintain the product with a clean, soft dry cloth. Do not use water or other chemical liquids for maintenance.
5.Do not attempt to disassemble the device; doing so will void the warranty.
6.Unauthorized battery replacement is prohibited and may pose a safety hazard.

Brand: Guangdong DK Music Electronic Technology Co., Ltd.
Manufacturer: Zhuhai DK Electronic Technology Development Co., Ltd.
Manufacturer Address: Room 301, Block B, Xin Ao Lin Science Park, No. 16 Jinxing Road, Hi-Tech Zone, Zhuhai, China.
Phone:+86-756-3666689 Website: www.dk-music.cn